

HOW TO CHANGE THE FRONT WIPER MOTOR

Tools required:

Ratchet spanner

10mm socket

12mm socket

chub nose Pliers

Flat head screwdriver

POSITION THE WIPERS AWAY FROM THE WINDSCREEN FACING UPWARDS OR REMOVE THE WIPER ARMS

USING THE RATCHET WITH THE 10 MM SOCKET ATTACHED,REMOVE THE 4 BOLTS THAT HOLD THE WIPER MOTOR TO THE FIREWALL.



REMOVE THE POWER CONNECTION BY UNPLUGGING THE WIRES




GENTLY PULL THE WIPER MOTOR AWAY FROM THE FIREWALL, YOU WILL FIND IT ATTACHED BY A 10MM NUT TO THE WIPER ARM MECHANISM.



HOLD THE METAL BRACKET WITH PLIERS AND UNDO THE BOLT:



UNBOLT THE 3 NUTS TO REMOVE THE MOTOR FROM THE BACKING PLATE

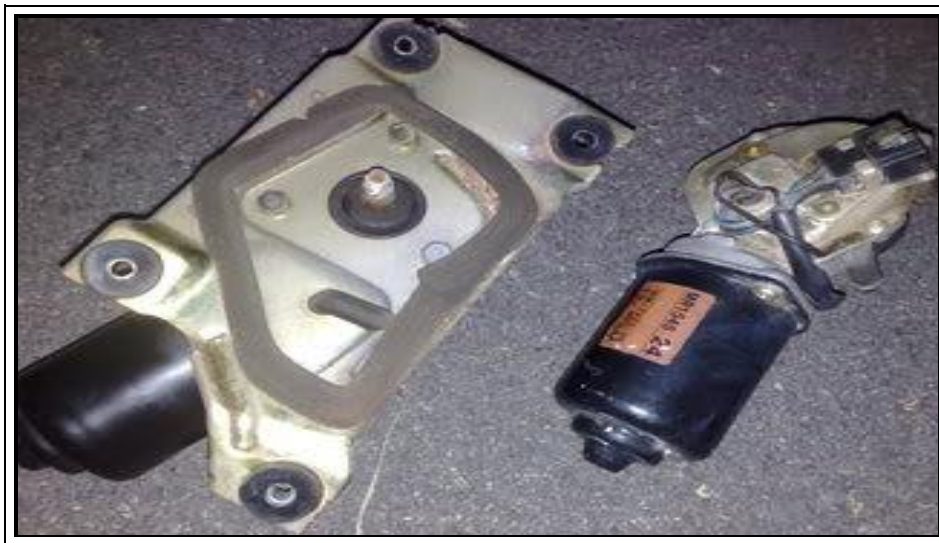

**WHEN FITTING THE NEW MOTOR TO THE BACKING PLATE,ENSURE THE RUBBER DRAIN TUBE IS
LIGNED UP CORRECTLY**



NOW REVERSE THE PROCEDURE TO REFIT

